



Digital Camcorder Battery User's Manual

(for Digital Concepts BP-808CL bp-815CL and BP-823CL batteries)

SPECIFICATIONS

Battery: BP-808CL
 Replacemet battery for JVC BNV-808
 800 mAh
 7.4 V

Battery: BP-815CL
 Replacemet battery for JVC BNV-815
 1500 mAh
 7.4 V

Battery: BP-823CL
 Replacemet battery for JVC BNV-823
 2300 mAh
 7.4 V

OPERATING INSTRUCTIONS

Using Your BP-808CL, BP-815CL, or BP-823CL Battery to Power Your JVC Camcorder



Step 1: Attach your battery securely to your camcorder.



Step 2: Once your battery is attached to your camcorder, take the cable that comes with your battery, and attach one end into the DC-IN/DC-OUT port on your battery. Connect the other end of this cable to the DC In port on your camcorder. Turn on your camcorder. The LED light on your battery will turn green, meaning your battery is powering your camera, and your camera is ready to use.

Charging Your BP-808CL, BP-815CL, or BP-823CL Battery

If you are charging your battery using the AC adapter that came with your camcorder, simply connect your AC adapter to a power outlet, and then plug your AC adapter directly into the DC-IN/DC-OUT port on your battery. The LED light on your battery will turn orange to show the battery is charging. This light will turn off when the battery is fully charged. Your battery does not need to be connected to your camera during this charging process.

Note: If you are charging your battery using an external battery charger, then no cables need to be connected to your battery. Just connect your battery to your charger securely, plug in your charger, and your battery should charge.



Using Your Battery With a Camcorder Dock



If you are connecting your camcorder to your computer using a dock, first, make sure your battery is securely connected to your camera. Next connect your camera to your dock. Take the cable that comes with your battery, and attach one end into the DC-IN/DC-OUT port on your battery. Connect the other end of this cable to the DC IN port on your camcorder dock. You can then take the cable that is included with your camcorder dock, and plug one end into the dock, and the other end into one of your computer's USB ports.

Note: Your camcorder does not provide you with the option of simultaneously charging your battery while it is connected to and powering your camera. For instructions on how to charge your battery, please read the above information on "Charging Your BP-808CL, BP-815CL, or BP-823CL Battery."

CAUTION:

1. Never dispose of batteries in fire or water.
2. Never touch the battery terminals with metal objects.
3. Always recharge battery on proper charger.
4. Do not attempt to open battery.
5. Do not drop battery or subject it to strong shocks.
6. Do not use battery at temperatures below -10 degrees celsius (15 F) or above +40 degrees celsius (105 F) (Use of battery at very high temperatures will activate the safety circuit disallowing use.)

TO MAXIMIZE PERFORMANCE:

1. Make sure the battery is fully recharged before use.
2. Clean the battery and terminals with a soft, dry cloth.
3. The battery may be warm during use or recharging. This is normal.
4. Total natural discharge may occur during long storage periods.
5. Remove the battery from charger or powered unit when not in use. Some machines use current even when switched off.
6. When operation has noticeably shortened, battery may need to be replaced.

NOTE:

ON SOME VIDEO CAMCORDERS, THE REMAINING RECORDING TIME MAY NOT DISPLAY ON THE CAMCORDER'S DISPLAY SCREEN. PLEASE PAY ATTENTION TO THE LED LIGHT ON THE BATTERY TO GAUGE THE REMAINING BATTERY CAPACITY. WHEN THE LIGHT IS GREEN, THERE IS OVER 10 MINUTES RECORDING TIME. IT WILL TURN RED TO INDICATE ONLY 10 MINUTES REMAIN.

TECHNICAL SUPPORT

For questions regarding customer service issues such as missing items, where and how to obtain warranty service and general questions please email us at support@sakar.com. If you are experiencing problems with any of these products and require immediate assistance, please call our technical support hot line at (877)397-8200.

SAKAR WARRANTY CARD

This warranty covers the original consumer purchaser only and is not transferable. Products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of five years.

What Is Not Covered By Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What To Do When Service Is Required:

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of original bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

MAIL TO ADDRESS BELOW:

Sakar International
 Attention: Service Department
 195 Carter Drive
 Edison, NJ 08817
 Tel: 732-248-1306